
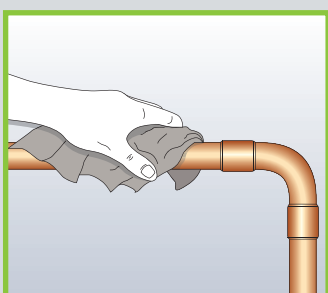



# ARMACELL APPLICATION GUIDE

## INSTALLATION HINTS


### ARMAFLEX ULTIMA SELF-ADHESIVE TUBES




Clean all dust, dirt, oil and water from pipework using Armaflex cleaner where necessary. Install Armaflex Ultima self-adhesive when ambient temperature is between +10 and +35 °C.

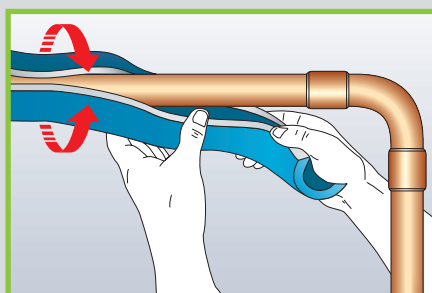


Open pre-slit Armaflex Ultima and snap onto pipe (the release paper is still protecting the self-adhesive strip).

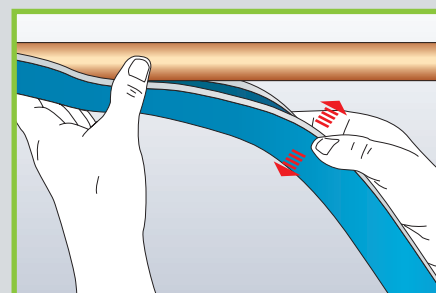


Adjust fitted Armaflex Ultima to ensure slit is easily accessible.

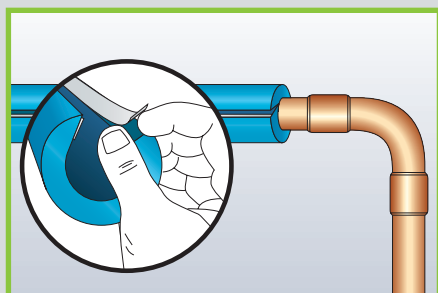


Locate the end of white release paper for the self-seal strip.

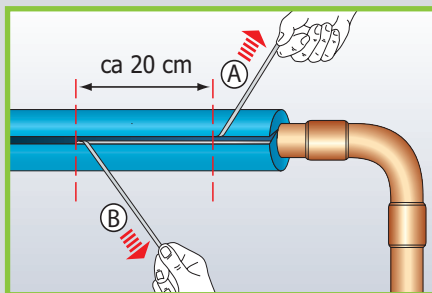


Remove the white protection paper strip on both sides, by drawing it away from the insulation. Please note: remove protective release paper strip from both sides!

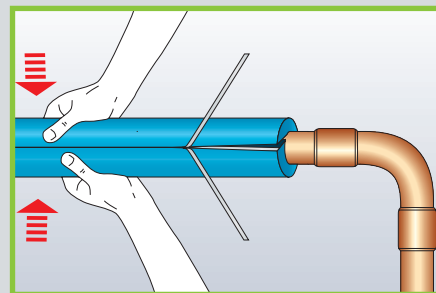


Close the slit seam and press together with firm pressure, to ensure a permanent seal.

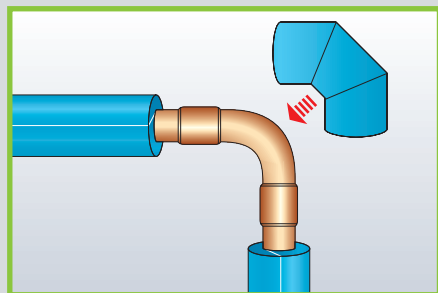

Insulate all other straight pipe sections following the previous described procedure. Finally insulate all elbows, T-pieces etc. following Armaflex Application Manual instructions.

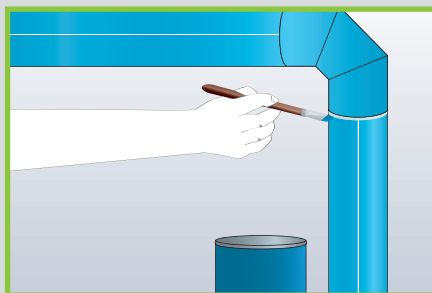

Seal all joints with Armaflex Adhesive. Do not stretch when sealing joints. When gluing joints under compression, with no gaps present, the wet adhesive method should be applied.

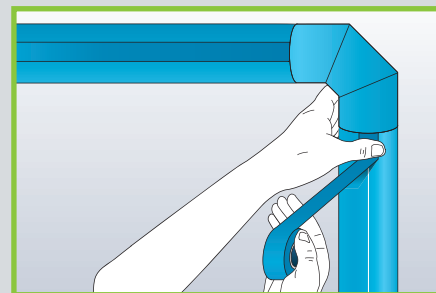

For additional security it is necessary to secure the longitudinal joints of Armaflex Ultima self-adhesive tubes with an additional Armaflex Ultima self-adhesive tape. Ensure that the surface is clean, dry and free from contamination, if necessary please clean it with Armaflex Cleaner.